



Dare to be Different

Outdoor

www.dtbdoor.eu

Dutch design since 2012



Gebruikshandleiding

User Manual

Benutzerhandbuch

EN

Kookkasten

Chuckboxes

Kochboxes



© 2021 DTBD Outdoor All Rights Reserved





1. Introduction

Thank you for choosing a chuckbox from Dare to be different Outdoor. Of course, we think you have made an excellent choice and we are sure you will be very happy with the features, benefits and quality of this Dare to be different Outdoor product.

This manual will help you to familiarize yourself with the chuckbox, by reading the instructions, you will certainly get the most out of our chuckbox.

EN

2. Safety

Our chuckboxes contain many points of interest where there is a potential risk of physical injury.

Our chuckboxes are also equipped with kitchen utensils, just like in your own kitchen at home, they contain things that are dangerous and can cause injury. Therefore, use this chuckbox with attention and awareness. Never leave children unattended in the vicinity of the chuckbox or its parts.

Keep this chuckbox away from children under the age of 12 at all times!

Below we have listed the hazards you will be exposed to when using our chuckboxes:

2.1. Cutting hazard



Our chuckboxes contain cutlery and kitchen utensils. These include sharp knives, such as a kitchen knife, fruit knife and scissors. You need to be very careful with these, always make sure you cut away from yourself. The knives come with a protective cover, always put the knife back in its protective cover when you are not using it.

The chuckbox is made of metal. Our goal is to unsharpen all edges as much as possible. Please be aware that there can be some sharp edges left.

2.2. Pinch hazard



Our chuckboxes are compact and have folding parts and drawers on all sides.

There is a potential danger of pinching when unfolding the table tops and using the drawers. Be careful where you put your hands and make sure that your fingers/skin and those of others do not get trapped.

Where you can pinch your fingers are the edges of the drawers and the table tops. And when you put the chuckbox on its base. Besides that there could be other places.



2.3. Ignition hazard



The chuckboxes are meant for cooking. In order to cook, you need heat. We supply our heat with gas burners, these burners work on gas. Gas can ignite when not properly used. Read always the safety instructions on the gas cartridge

EN

2.4. High temperature risk



The chuckbox is used for cooking when cooking some surfaces will become warmer than others. Please be aware that the gasburners and windshield could be very hot and side surfaces of the burners also could be heated while cooking.

Pots and pans are heated during cooking be careful with these.

Keep in mind that when the chuckbox is fully exposed to direct sunlight all stainless steel surfaces will be heated by the sun. All these surfaces can be very hot. And give risk of burnings.

The chuckbox also contains a water boiler, be careful to keep the boiling water away from children and not to drop it on yourself. When you boil liquids, hot steam can be generated, so be careful, this can cause serious burn injuries.

2.5. Fire hazard



Our chuckbox is equipped with gas burners when used they generate a flame which can cause a fire, so you must be very careful not to have any flammable items near the chuckbox so that a fire cannot occur. It is also extremely important that you have absolutely no open gas or petrol in the vicinity of the burners. This can cause explosions.

2.6. Common sense

For all cutters in this chuckbox supplied there is a risk in use. Please use them properly and safely. And always under an adult supervision.

DTBD outdoor cannot be held liable for failure to follow all the safety instructions in this chapter.



3. The Do's and Don't

When using the chuckbox there are important things to keep in mind:

3.1. Do's

- Always make sure that you place the chuckboxes in such a way that you do not disturb the surroundings where you intend to place the chuckbox.
- When using the chuckboxes, make sure you have a solid surface. This is important because you are using fire and must ensure that the chuckbox cannot be knocked off balance.
- Always use the chuckbox in a place with adequate ventilation.
- Use the chuckbox as a table and as a place to prepare the food.
- Make those around you aware of what you are doing.
- Tell children not to play on and around the chuckbox.
- Use the chuckbox consciously and do not allow yourself to be distracted.
- Place your hands carefully when unfolding the table tops.
- Use the handle to open the drawers.
- Always make sure that you tighten the gas connections properly; if in doubt, check the connection with some soapy water.
- After cooking, make sure that the gas taps are properly closed. When in doubt disconnect the gas cartridge. (The valve in the gas cartridge ensures that no gas can escape).
- When you pack away the chuckbox, always make sure that all pans, the kettle and the burners have cooled down.
- When starting the burners open the gas knob a bit. Start small and when the pot or kettle is placed turn the gas higher.
- Keep the flame from extending past the pot side.
- Turn pot handles away from the stove edge.

3.2. Don'ts

- Do not use the chuckbox as a chair or stand. It is not suitable for this purpose.
- Do not walk away from the chuckbox while it is cooking, not even for a moment.
- Do not leave a gas burner on if there is no pan or kettle on it. (In some cases, the flame can be practically invisible).
- Do not place the chuckbox on an uneven surface (if necessary, take some filling boards with you so that you can stack them and put the chuckbox in a stable position).
- Do not load each folding table with more than 10Kg. (Do not lean on the table with your full weight).



- Do not use the burner of the chuckbox when you are in an enclosed space.
- Never leave cooking unattended.
- Never get distracted. If you are called away, turn off the gas.
- Never allow a child to cook without adult supervision.

M chuckbox

- Do not open the top drawer when cooking.
- Do not open more than two drawer at the same time. The chuckbox will be unstable and could tumble.

S Chuckbox

- Before starting to cook remove all things you need from the upper storage behind and under the burners.



4. Gas

The gas connection of the burners of the chuckboxes is a worldwide standard.

They are the so called screw on cartridges. They are available in different sizes from 100 grams to 700 grams from different brands.

The most important brands are Primus, Coleman, Optimus. There are also many other brands. These cartridges are available at campsite shops, petrol stations and DIY shops.

To use a Campingaz CV470, C206 you will need an adapter. This can be ordered from the Campingaz website or from a Campingaz dealer.



EN

4.1. Guidelines for using Gas cartouches

Incorrect or careless use of gas cartridges can be dangerous. Therefore, here are some important tips on how to handle gas cartridges safely.

Positioning of cartridges

- Always store gas cartridges in an upright position and do not dig them in.
- Avoid placing them in direct sunlight or close to a source of heat such as an open fire or stove.
- Always store the (unused) gas cartridges in a well-ventilated area. Wherever possible, place the gas bottle outside.

Transporting gas cartridges

- Always transport gas cartridges in an upright position, with the gas valve pointing upwards, and fasten them securely.
- Always transport gas cartridges with the gas valve closed, even when they are empty.
- Do not smoke when transporting gas cartridges and always switch off your vehicle's engine when loading and unloading.
- Ensure that there is adequate ventilation when transporting gas cartridges. Do not leave gas cartridges in your vehicle for too long - remove them when you reach your destination.



5. Maintenance

5.1. General

After using the chuckbox, make sure you clean it thoroughly. When you have cleaned it, make sure that everything is dry before you put it away again.

Keep sand away from the drawer systems. Sand can damage these drawer systems.

In principle drawer slides are greased for life. When cleaning thoroughly it could happen that grease of the drawer slides is removed. Then it is important and easy to grease the drawer system again. Use standard ball bearing grease be sure not to apply too much.

EN

6. Unpacking the chuckbox for the first time

When you receive the chuckbox, it is in a cardboard box.

1. Open the box carefully with a knife by cutting the tape.
2. Open the box.
3. Remove the protective foam.
4. The chuckbox has a velour cover to prevent scratches.
5. On top of the chuckbox there is a handle, which can be folded up through the velour cover so that you can remove the chuckbox from the box by using this handle.
6. Remove the velour cover.
7. Loosen the 4 latches and take the lid off the chuckbox.
8. To protect the contents, all parts are packed together in the chuckbox.
9. Now remove all plastic protection materials and cut the ty-raps that hold the drawers in place.
10. Open the drawer and unpack all the loose parts. (Be careful when unpacking the knives as they are sharp)
11. Do this for each drawer.
12. In the top drawer of the M chuckbox, remove the ty raps that secure the pans and burners.
13. When you have unpacked everything, close the drawers, put the lid back on the chuckbox and close the 4 latches.
14. Lift the chuckbox a little to check if the latches are good closed. Then move the chuckbox to the place you want to.
15. The chuckbox is now ready for use.



7. Setting up the chuckbox S.

Step 1: Open the four latches on each corner one.



Step 2: Remove the cover from the chuckbox.



Step 3: Put the cover away or put the chuckbox on the cover



Step 4: Fold the 3 side table top upwards, and for each side table lock the two brackets by pushing them in the direction of the arrow.





Step 5: Lift off the top sheet/windshield.



Step 6: Place the cutting board aside.



Step 7: Unfold the table top as a windshield and put it in place see below.



Step 8: Slide the burners to you and take them out.



Step 9: Place the burners on top of the chuckbox on the supports left and right see arrows.



EN



Step 10: Remove the tray with cups and gas hose from under the gas burners.



Step 12: Remove the gas hose from the tray.



Step 13: Connect the gas connection with self shutting valve. (you can choose to connect both burners or just 1 burner)



Step 14: Guide the gas hose through the chuckbox like this.



Step 15: Connect the gas connection to the gas bottle.





Step 16: Remove the pans from the bag under the burners.



Step 17: Put a pan on a gas burner (you can fold out the gas burners so that the pans are better positioned on the gas)



Step 18: To switch on the gas, press the orange button ignition and turn the black knob for gas. Sometimes you have to multiple press the ignition button to ignite the gas.



Step 19: Enjoy cooking and prepare a good meal.

Please note:

Placing the chuckbox should be done very deliberately. There are many points where you have to be careful. If you don't, it can cause serious injuries to the body. Or can cause damage to the chuckbox or surroundings.

DTBD Outdoor is not liable for physical injury or damage to the chuckbox or its surroundings resulting from failure to follow these instructions.



8. Dismantling the chuckbox

Before dismanteling:

Wait until the burners and the pots and pans are cooled down before handling them.



EN

Step 1: Put the pans and materials that have been used back where you got them.

Step 2: Remove the burners from the tray.

Step 3: Push back the burners under the tray.



Step 4: Remove the windscreen from the platform.

Step 5: Place the cutting board above the burners



Step 6: Fold the table top/windscreen and place it back in position on top of the chuckbox.





Step 7: Release the table leg brackets by pushing them diagonal to the hinge of the side table, and let the table tops fall down carefully



EN



Step 8: Close the drawer firmly.

Step 9: Remove the chuckbox from the cover if it is on it.



Step 10: Put the cover back on the chuckbox (make sure it is in the right position)



Step 11: Close all four latches.

Step 12: Lift the chuckbox a little to check if the latches are good closed. Then move the chuckbox to the place you want to.

And you are good to go.

Please note:

Packing the chuckbox should be done very deliberately. There are many points where you have to be careful. If you don't, it can cause serious injuries to the body. Or can cause damage to the chuckbox or surroundings.

DTBD Outdoor is not liable for physical injury or damage to the chuckbox or its surroundings resulting from failure to follow these instructions.



9. Setting up the chuckbox M.

Step 1: Open the four latches on each corner one.



EN

Step 2: Remove the cover from the chuckbox.



Step 3: Put the cover away or put the chuckbox on the cover



Step 4: Fold the 3 side table top upwards, and for each side table lock the two brackets by pushing them in the direction of the arrow.





Step 5: Open the lowest drawer en grab below the lowest drawer from the back the two extra table pieces.



EN

Step 6: Place the table piece like this in position.

Place one side in position like this and then lower it like this see other picture.



Step 5: Lift off the the front top sheet/windshield.



Step 7: Unfold the windshield and put it in place see below. You can use it in a flexible way.





Step 8: Open the top drawer. Take the burners out the drawer and place them in position like this.



EN

If you want to use only one burner it's possible to do so, but you need to remove only the other burner from the top drawer. Then there is enough room for a stable mount of the burner.



To use both burners its obligated to remove the big pots from the top drawer, then the burners are stable in position.



Step 9: Remove the gas hose from the rear compartment of the top drawer.

Step 10: Connect the gas connection with self shutting valve. (you can choose to connect both burners or just 1 burner)





Step 11: Connect the gas connection to the gas bottle.



EN


Step 12: Guide the gas hose through the chuckbox like this.



Step 13: Place the pots and pans you want to use on the burners.



(you can fold out the supports of the gas burners so that the pans are better positioned on the gas)

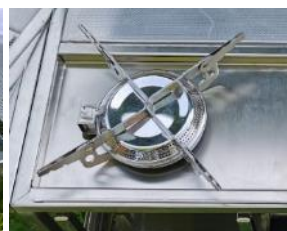



Step 14: To switch on the gas, press the orange button and turn the black knob.



EN

Step 18: Enjoy cooking and prepare a good meal.

Please note:

Placing the chuckbox should be done very deliberately. There are many points where you have to be careful. If you don't, it can cause serious injuries to the body. Or can cause damage to the chuckbox or surroundings.

DTBD Outdoor is not liable for physical injury or damage to the chuckbox or its surroundings resulting from failure to follow these instructions.



10. Dismantling the chuckbox

Before dismanteling:

Wait until the burners and the pots and pans are cooled down before handling them.

EN

Step 1: Put the pans and materials that have been used back where you got them.



Step 2: Remove the burners from the tray.

Step 3: Place the burners back in the drawer like this. Wait until the burners are cooled down before handling them.



Step 4: Fold the windscreen and place it back in position on top of the chuckbox.





Step 5: Remove the extra table pieces and put them back below the lowest drawer. Like this.



EN

Step 6: Release the table leg brackets by pushing them diagonal to the hinge of the side table, and let the table tops fall down carefully





Step 7: Close all drawers firmly.



EN

Step 8: Remove the chuckbox from the cover if it is on it.



Step 9: Put the cover back on the chuckbox (make sure it is well positioned)



Step 10: Close all four latches.

Step 11: Lift the chuckbox a little to check if the latches are good closed. Then move the chuckbox to the place you want to.

And you are good to go.

Please note:

Packing the chuckbox should be done very deliberately. There are many points where you have to be careful. If you don't, it can cause serious injuries to the body. Or can cause damage to the chuckbox or surroundings.

DTBD Outdoor is not liable for physical injury or damage to the chuckbox or its surroundings resulting from failure to follow these instructions.



11. Guarantee

All our products have a 24-month warranty from the date of purchase.

Warranty conditions

The guarantee period is valid from the date of purchase. Keep the original invoice. You will need the invoice as proof of purchase.

If a material or manufacturing defect occurs within 24 months from the date of purchase of this product, we will, at our option, either repair or replace the product for you free of charge.

If the defect is covered by our guarantee, the repaired or new product will be returned to you. The repair or replacement of the product does not start a new warranty period.

The guarantee period is therefore not extended when, under guarantee, the product is replaced by a new product. This also applies to replaced and repaired parts. Any damage and defects occurring at the time of purchase must be reported immediately after unpacking and no later than 1 week after the purchase date.

Costs are charged for repairs after the guarantee period has expired.

11.1. Warranty scope

Our products are manufactured according to strict quality standards with the greatest possible care and are carefully checked before delivery.

The guarantee applies to material or manufacturing defects.

This guarantee does not apply to product parts that are subject to normal wear and tear and can therefore be classified as wear parts, or to damage to fragile parts.

This guarantee becomes null and void if the product is damaged, used improperly or repaired. For proper use of the product, all instructions described in these operating instructions must be strictly adhered to. Uses and actions not recommended or warned against in the operating instructions must be avoided at all costs. The product is intended exclusively for private use and not for commercial purposes.

The 24-month warranty is invalidated if our products are used for commercial rental.

The warranty becomes null and void in the event of improper and incorrect use, use of force and repairs not carried out by us or our dealers.



11.2. Dealing with a warranty issue

Please observe the following instructions so that your application is processed quickly:

- In all communications with us or our dealers, it is important to communicate the invoice data
- If you notice any defects, please contact your dealer or us immediately by telephone or e-mail.
- Our dealer or we will then communicate with you about the next steps.

Shipping costs for warranty issues are always at the costs of the customer. So please always contact us to prevent unnecessary shipping costs.

EU Service address:

info@dtbdoutdoor.eu

Dare to be Different Outdoor
Zwolsweg 333
7345 AA Wenum Wiesel
The Netherlands

8. Disposal

The packaging protects the product from transport damage. The packaging materials are selected for their environmental friendliness and are therefore recyclable.

Dispose of the packaging materials in accordance with the locally applicable regulations.

You can find out how to dispose of the discarded product from your municipality.